
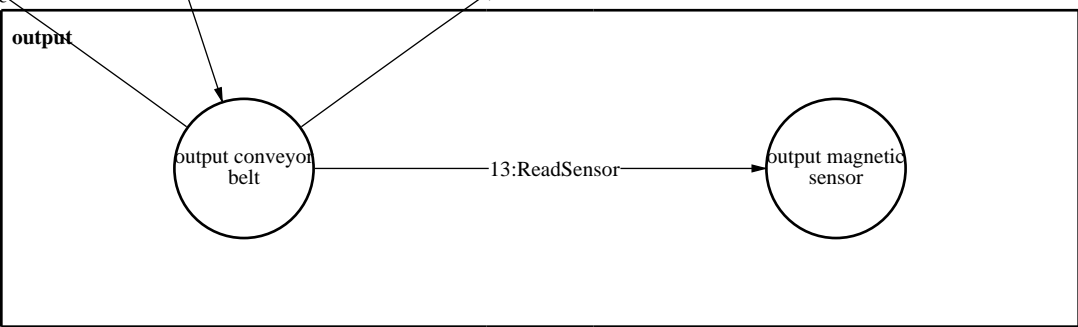
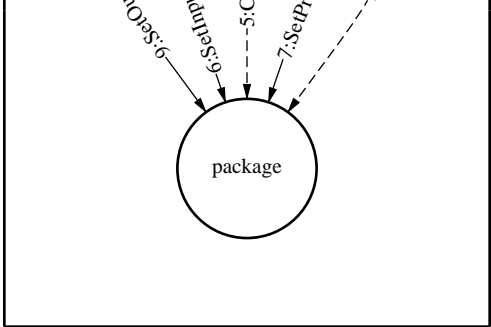
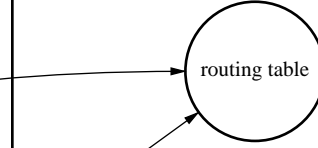
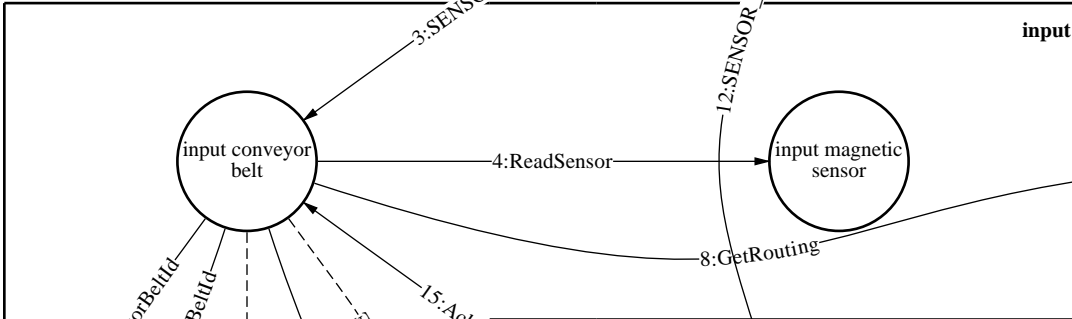
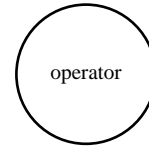
 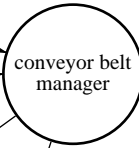


helix router

core



1:sensor_interrupt

11:SENSOR_INTERRUPT

2:SENSOR_INTERRUPT

3:SENSOR_INTERRUPT

12:SENSOR_INTERRUPT

10:sensor_interrupt

4:ReadSensor


8:GetRouting

9:SetInputConveyorBeltId
6:SetInputConveyorBeltId
5:CREATE
7:SetProductInfo
16:DELETE

15:AcknowledgePackage








14:GetReverseRouting

13:ReadSensor

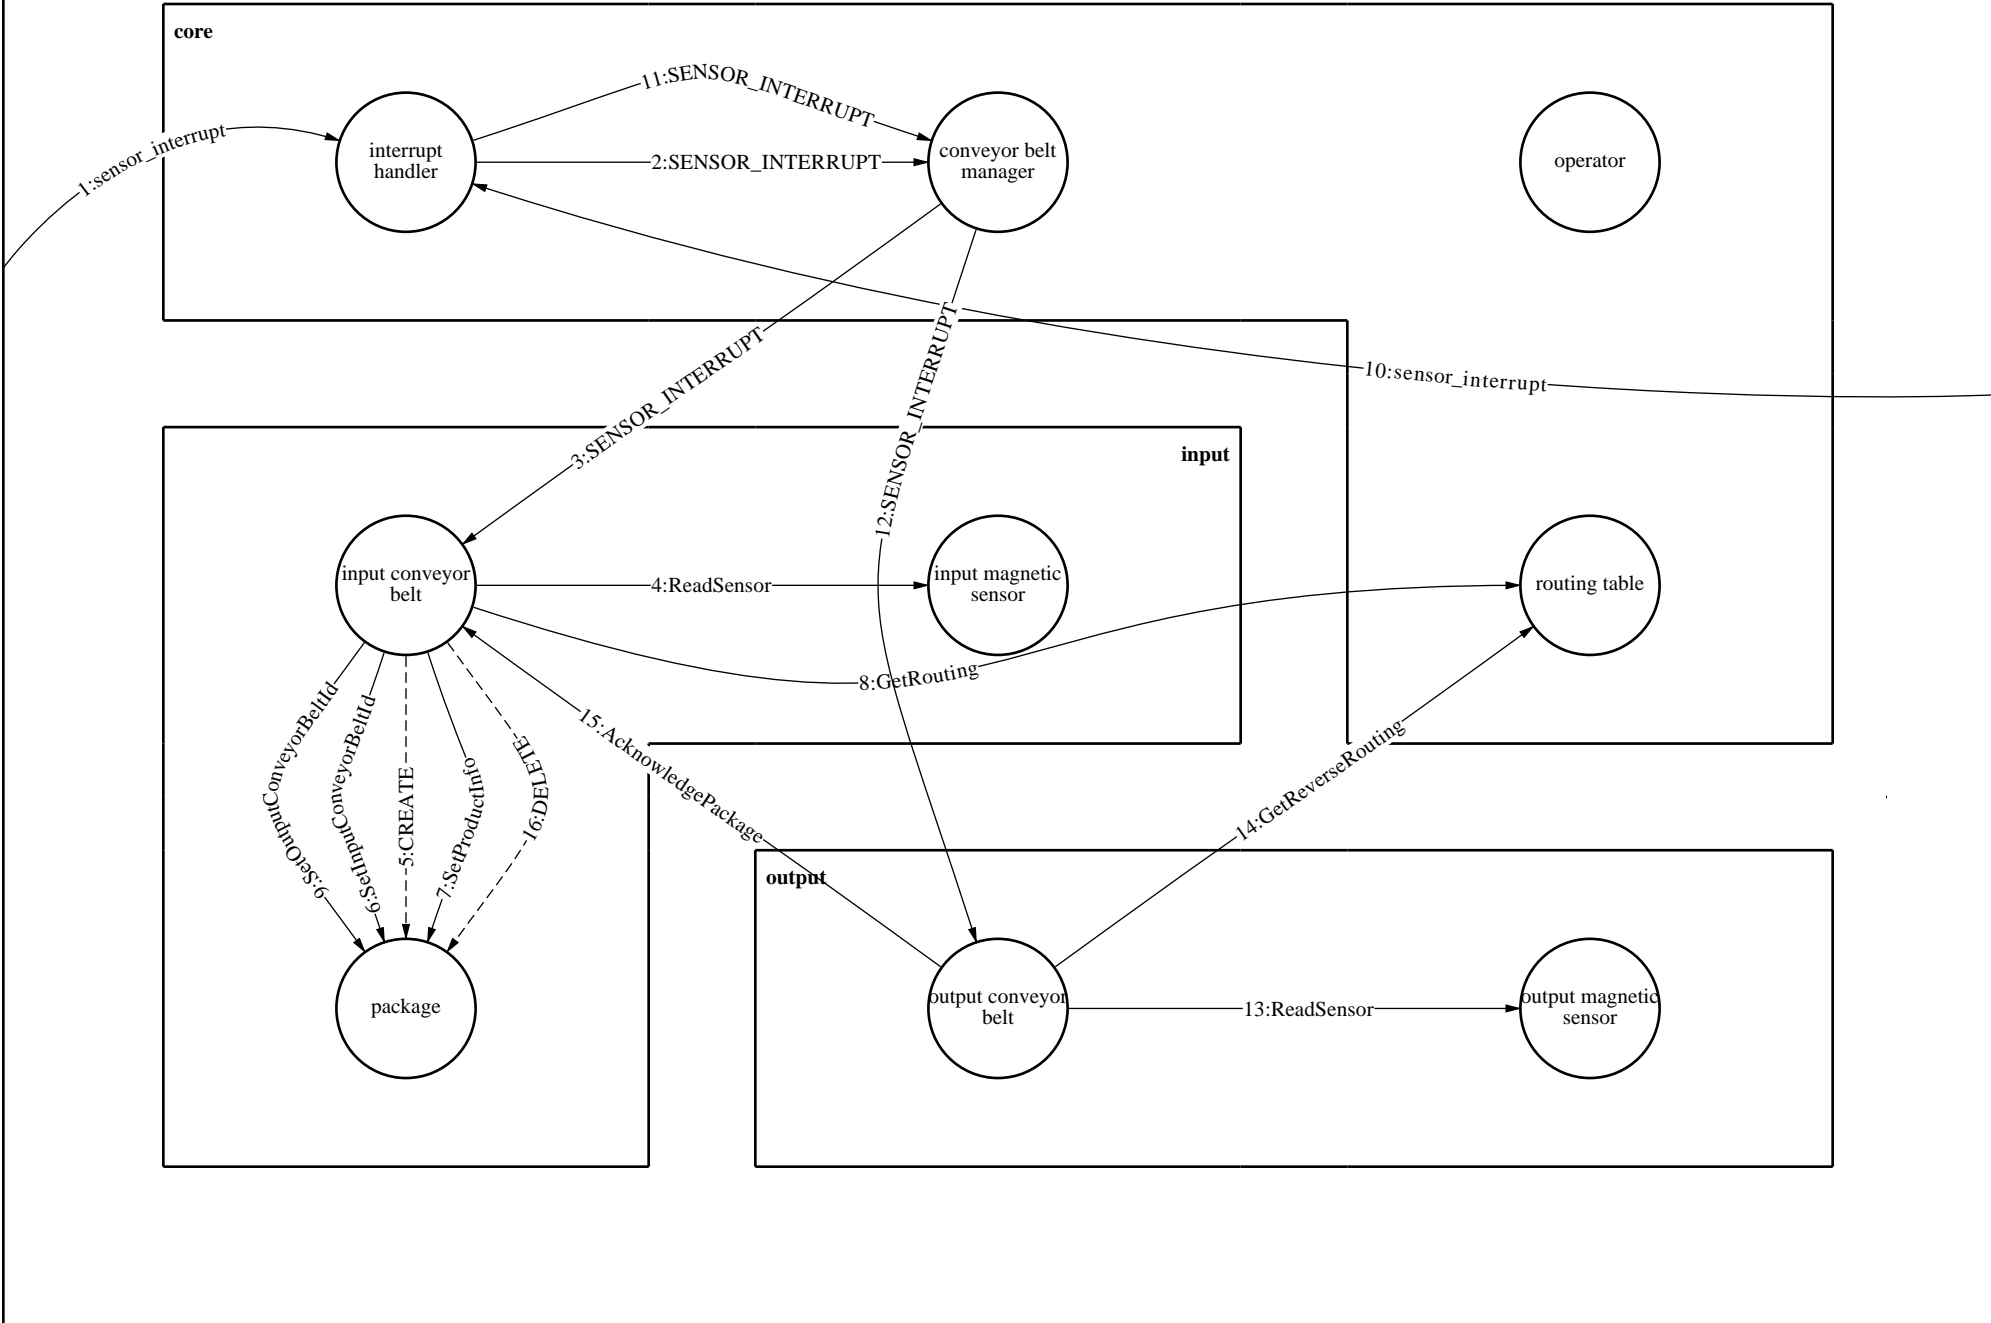





helix router

core

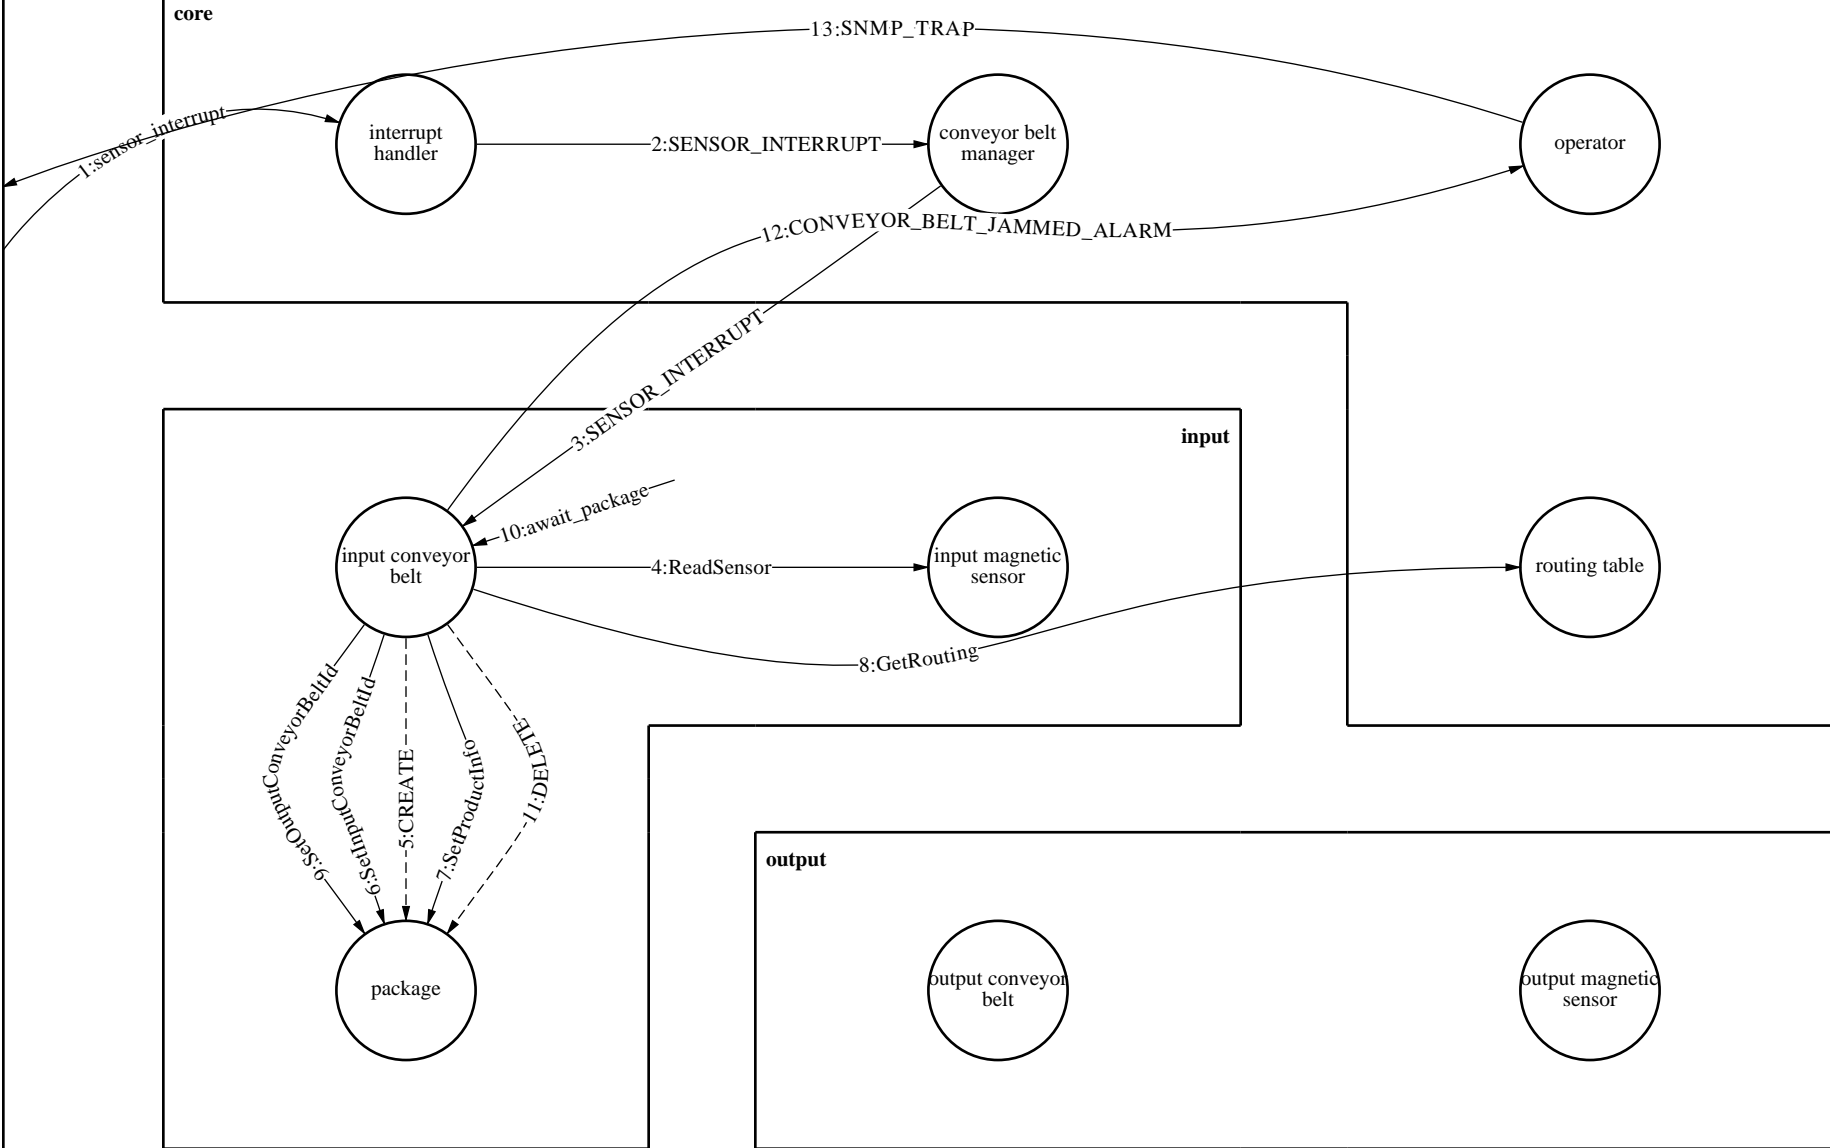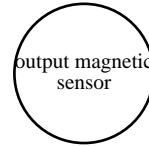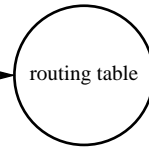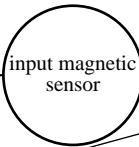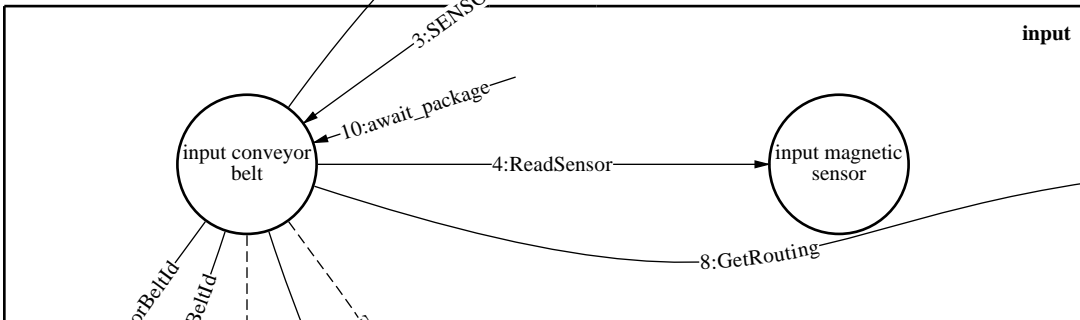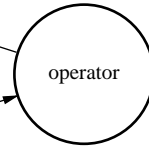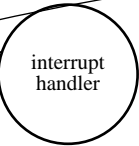

helix router

core

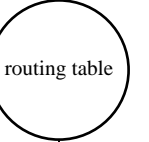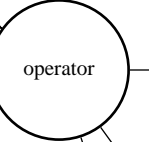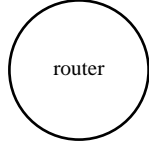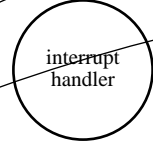

9:SNMP_SET

1:SNMP_SET

7:SNMP_SET




8:RoutingUpdate

11:UnConfigureBelt

2:ConfigureBelt

10:RemoveRouting

belt

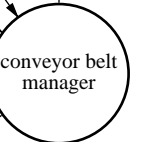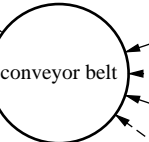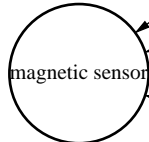

14:DELETE

6:Activate

5:CREATE

13:Deactivate

4:ConfigureBelt

3:CREATE

12:UnConfigureBelt

15:DELETE

