


IMS Originating to PSTN ISUP Call (IMS-PSTN(ISUP) Call; Megaco/H.248 Signaling; IMS Caller Initiated Call Release)


Calling UE	IMS Core Network		PSTN Interface		
Caller User Equipment	Visited IMS	Home IMS	Signaling		Media
Caller	Orig P-CSCF	Orig S-CSCF	BGCF	MGCF	IM-MGW

Initiate Call


IMS to PSTN Call Routing via BGCF

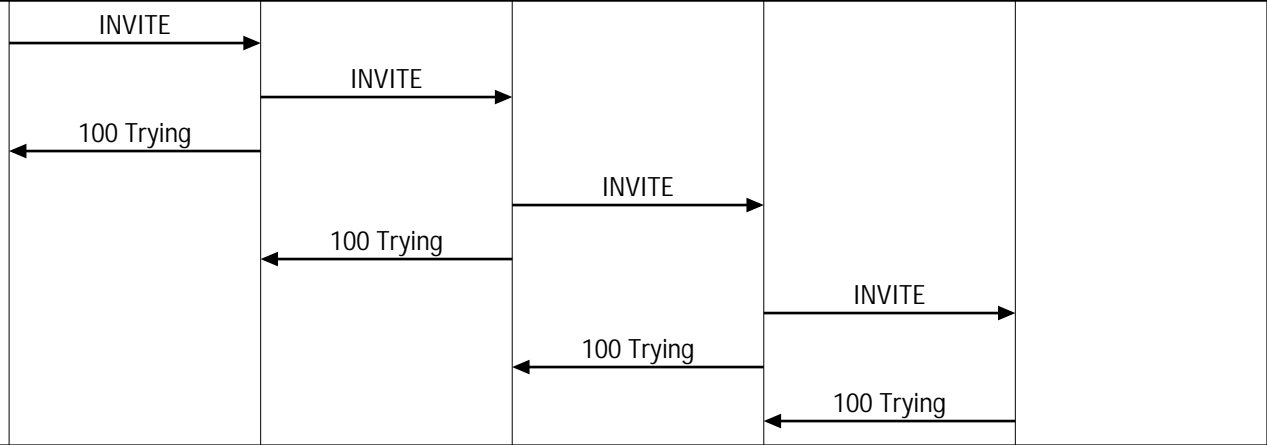


IM-MGW Initial Setup

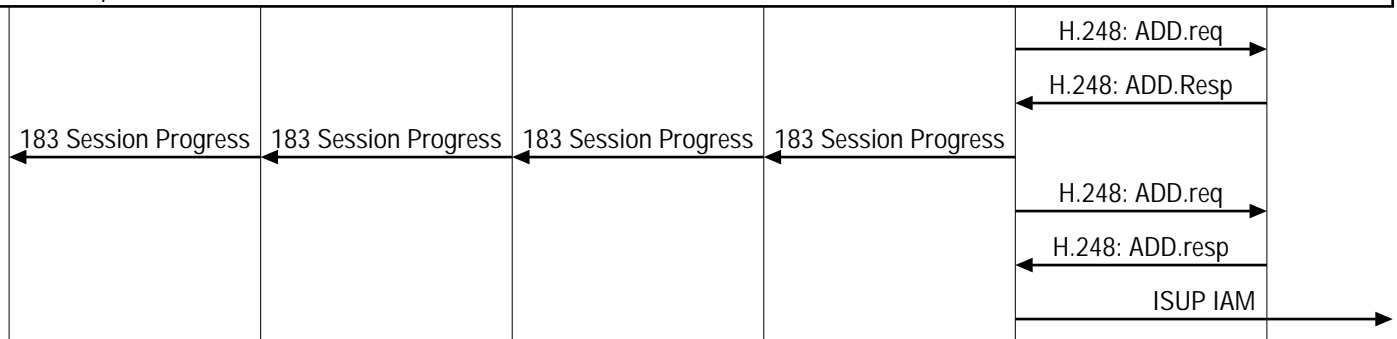


Caller Media PDP Context Activation

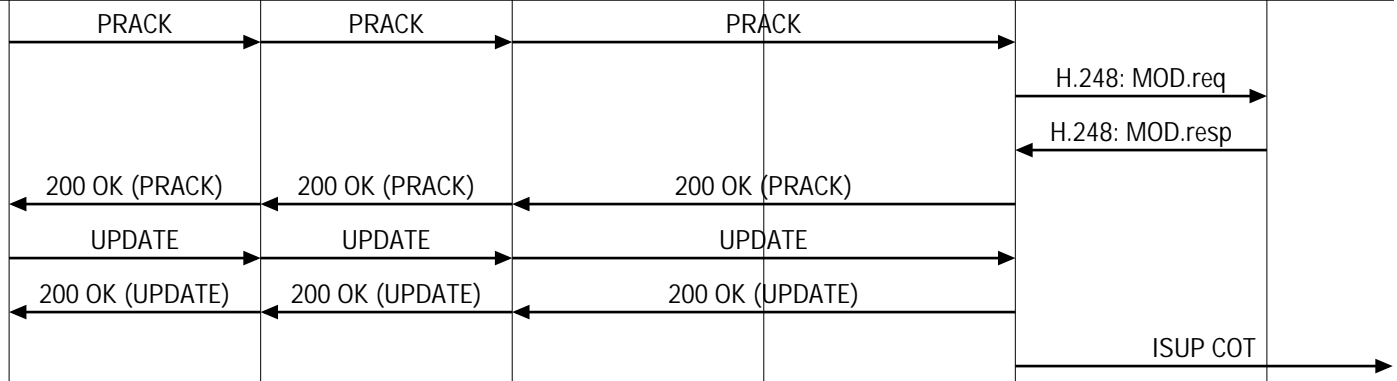

Ringling

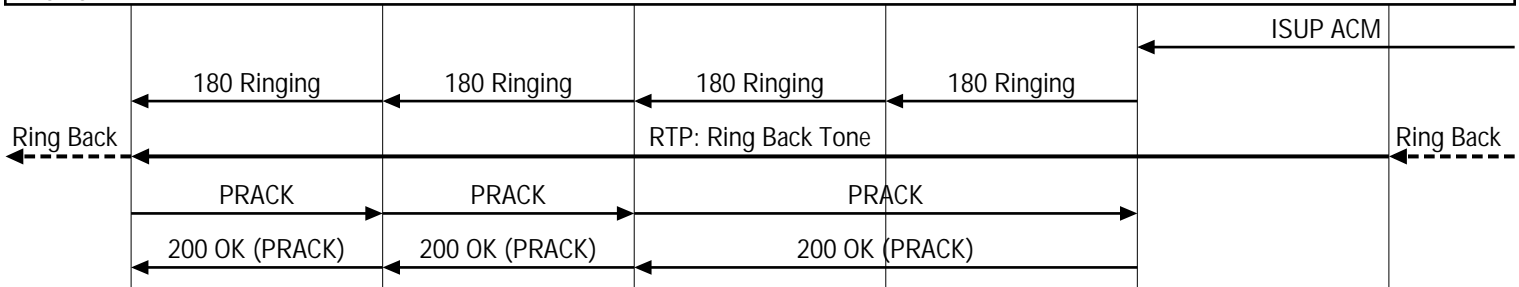

Conversation Mode

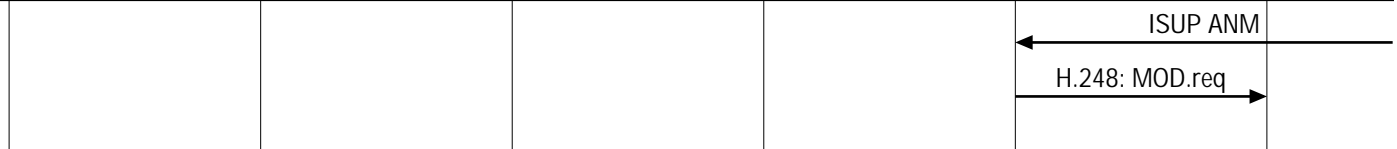

IMS Originating to PSTN ISUP Call (IMS-PSTN(ISUP) Call; Megaco/H.248 Signaling; IMS Caller Initiated Call Release)

Calling UE	IMS Core Network		PSTN Interface		
Caller User Equipment	Visited IMS	Home IMS	Signaling		Media
Caller	Orig P-CSCF	Orig S-CSCF	BGCF	MGC	IM-MGW

