
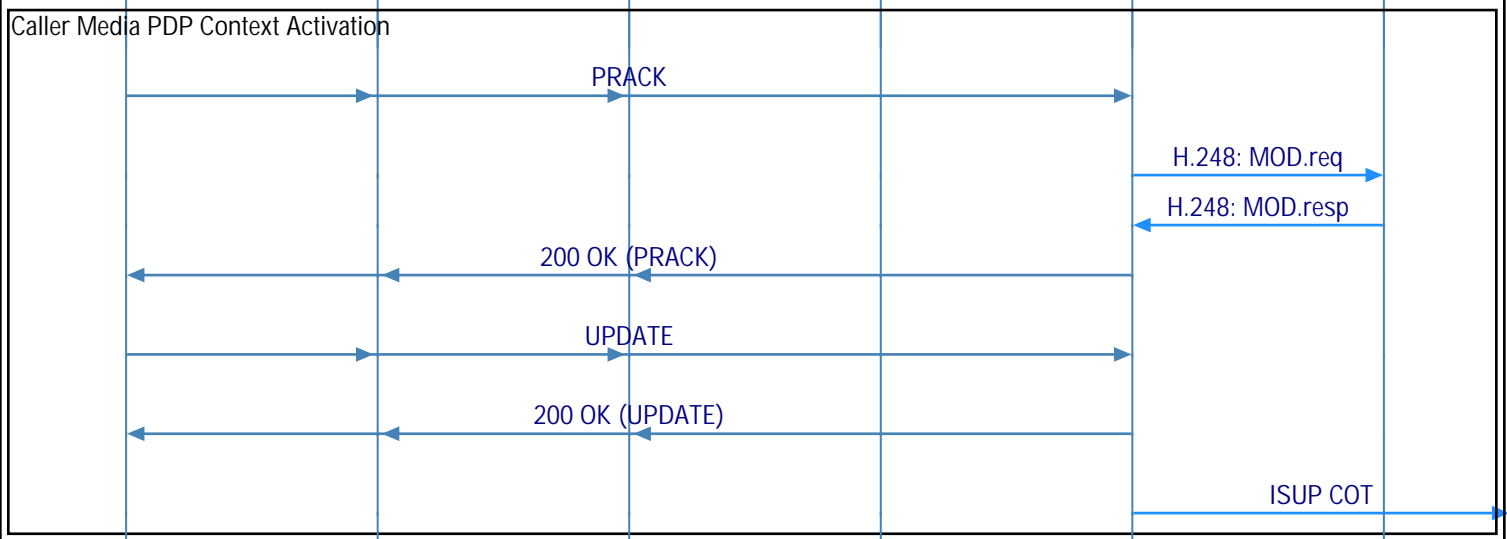
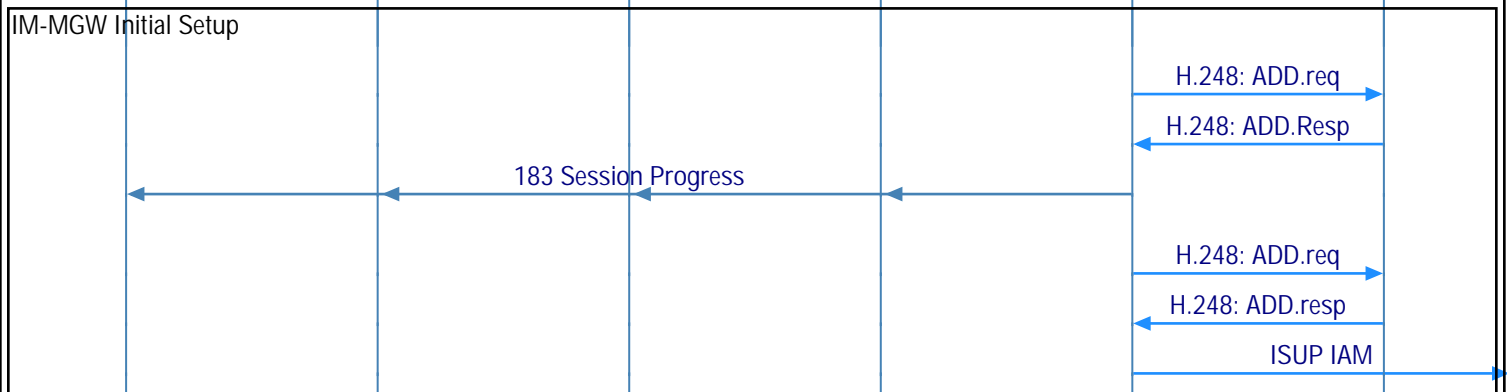


**IMS Originating to PSTN ISUP Call (IMS-PSTN(ISUP) Call; Megaco/H.248 Signaling; IMS Caller Initiated Call Release)**




Calling UE	IMS Core Network		PSTN Interface		
Caller User Equipment	Visited IMS	Home IMS	Signaling		Media
Caller	Orig P-CSCF	Orig S-CSCF	BGCF	MGCF	IM-MGW

IMS to PSTN(ISUP) call setup  
 Initiate Call

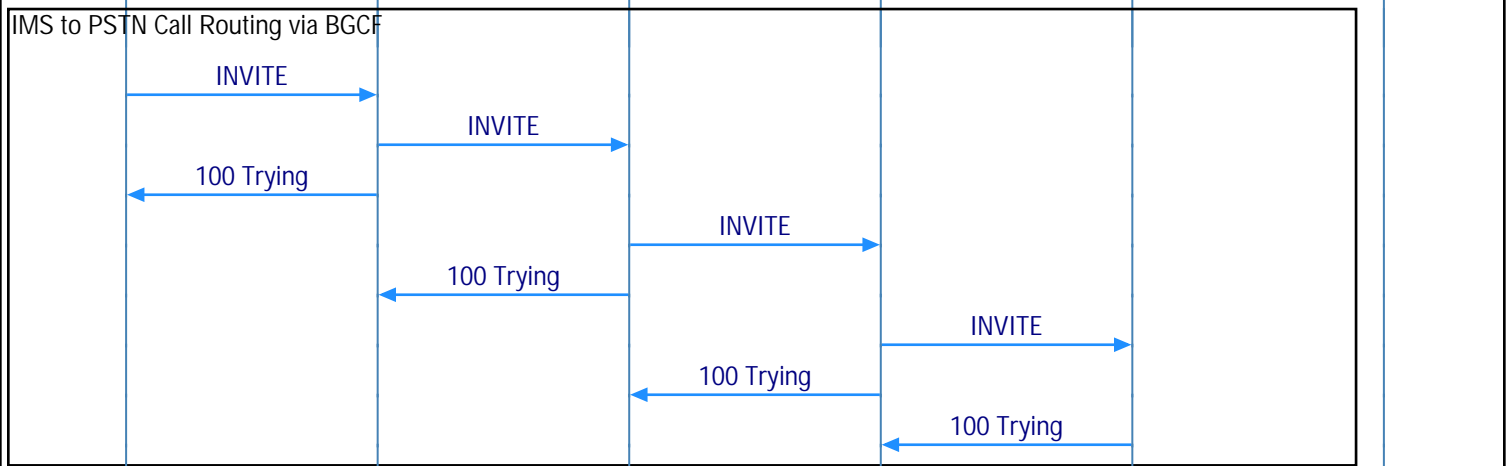

**IMS Originating to PSTN ISUP Call (IMS-PSTN(ISUP) Call; Megaco/H.248 Signaling; IMS Caller Initiated Call Release)**


Calling UE	IMS Core Network		PSTN Interface		
Caller User Equipment	Visited IMS	Home IMS	Signaling		Media
Caller	Orig P-CSCF	Orig S-CSCF	BGCF	MGC	IM-MGW

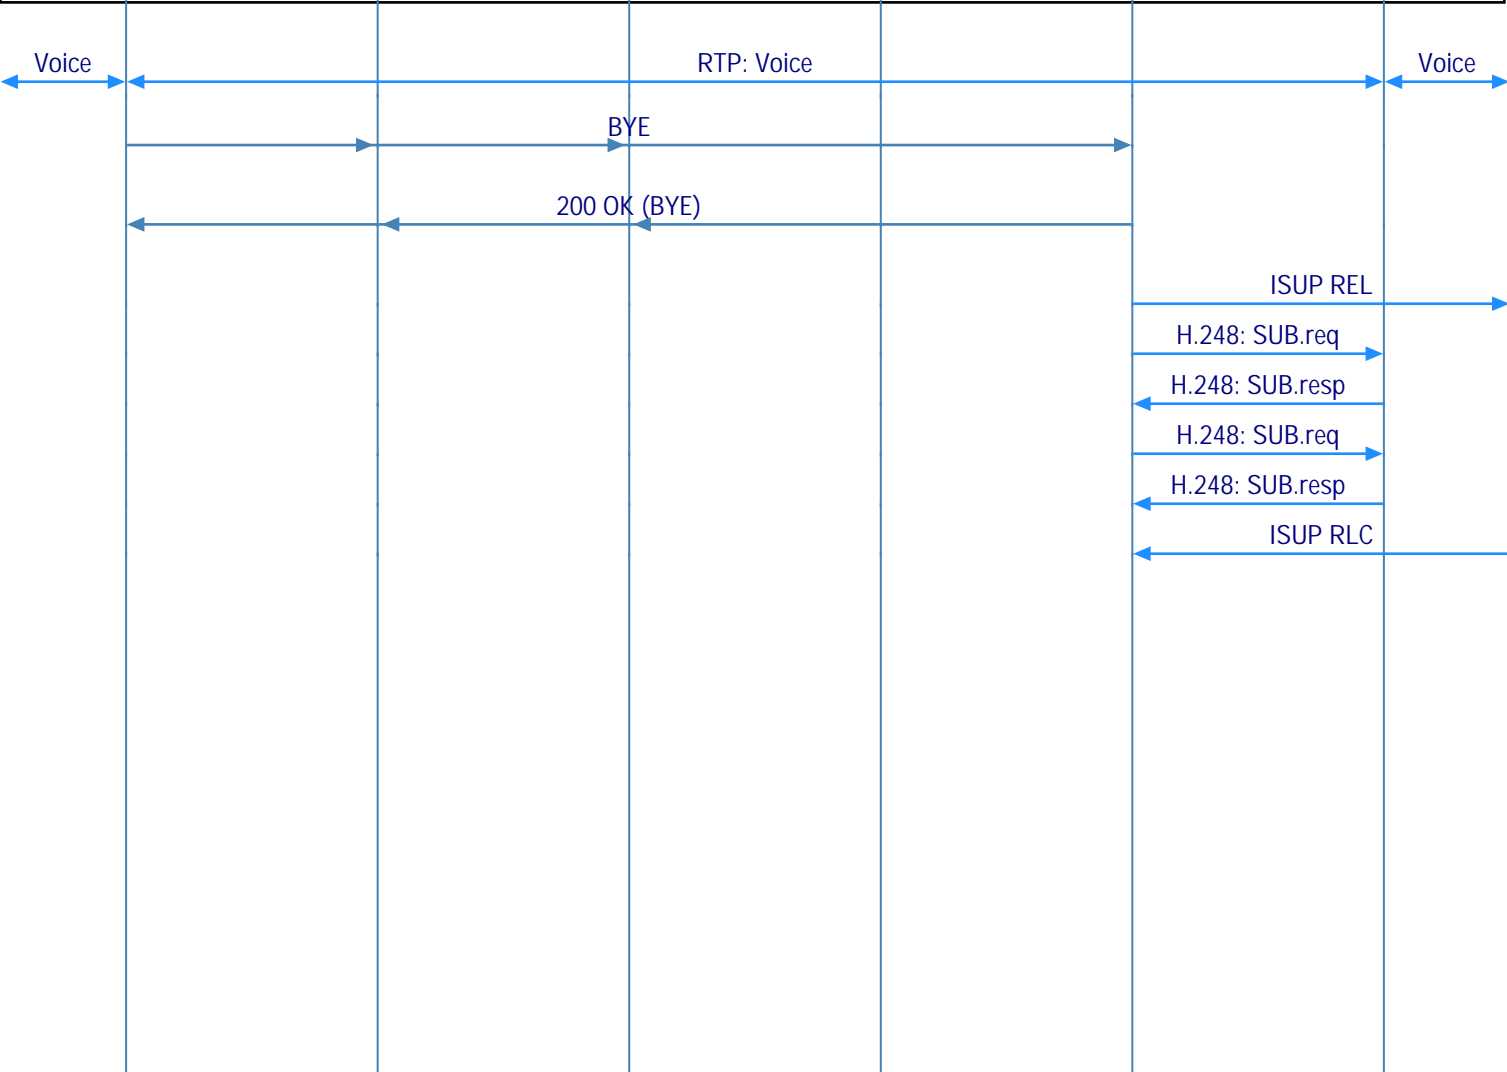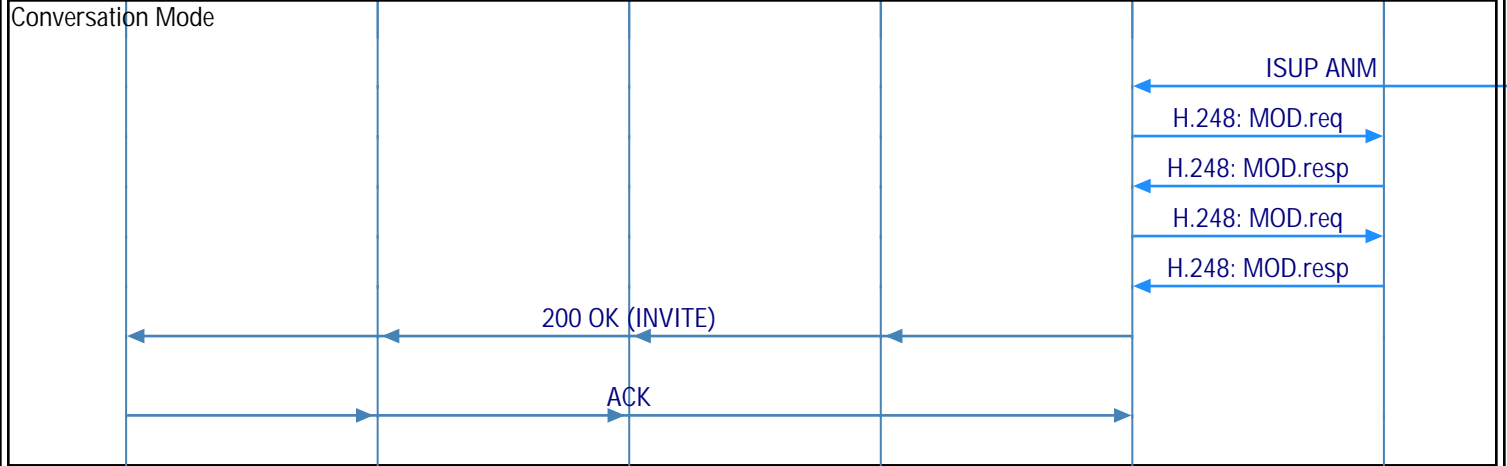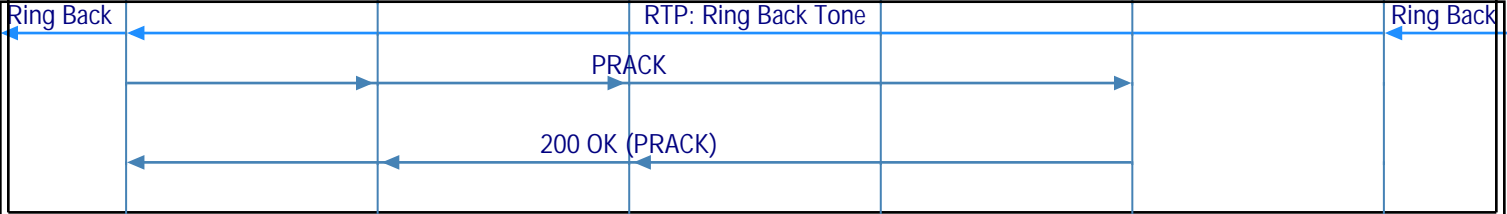

**IMS Originating to PSTN ISUP Call (Called PSTN Subscriber Initiates Release)**

Calling UE		IMS Core Network		PSTN Interface		
Caller User Equipment	Visited IMS	Home IMS	Signaling		Media	
Caller	Orig P-CSCF	Orig S-CSCF	BGCF	MGC	IM-MGW	


IMS to PSTN(ISUP) call setup

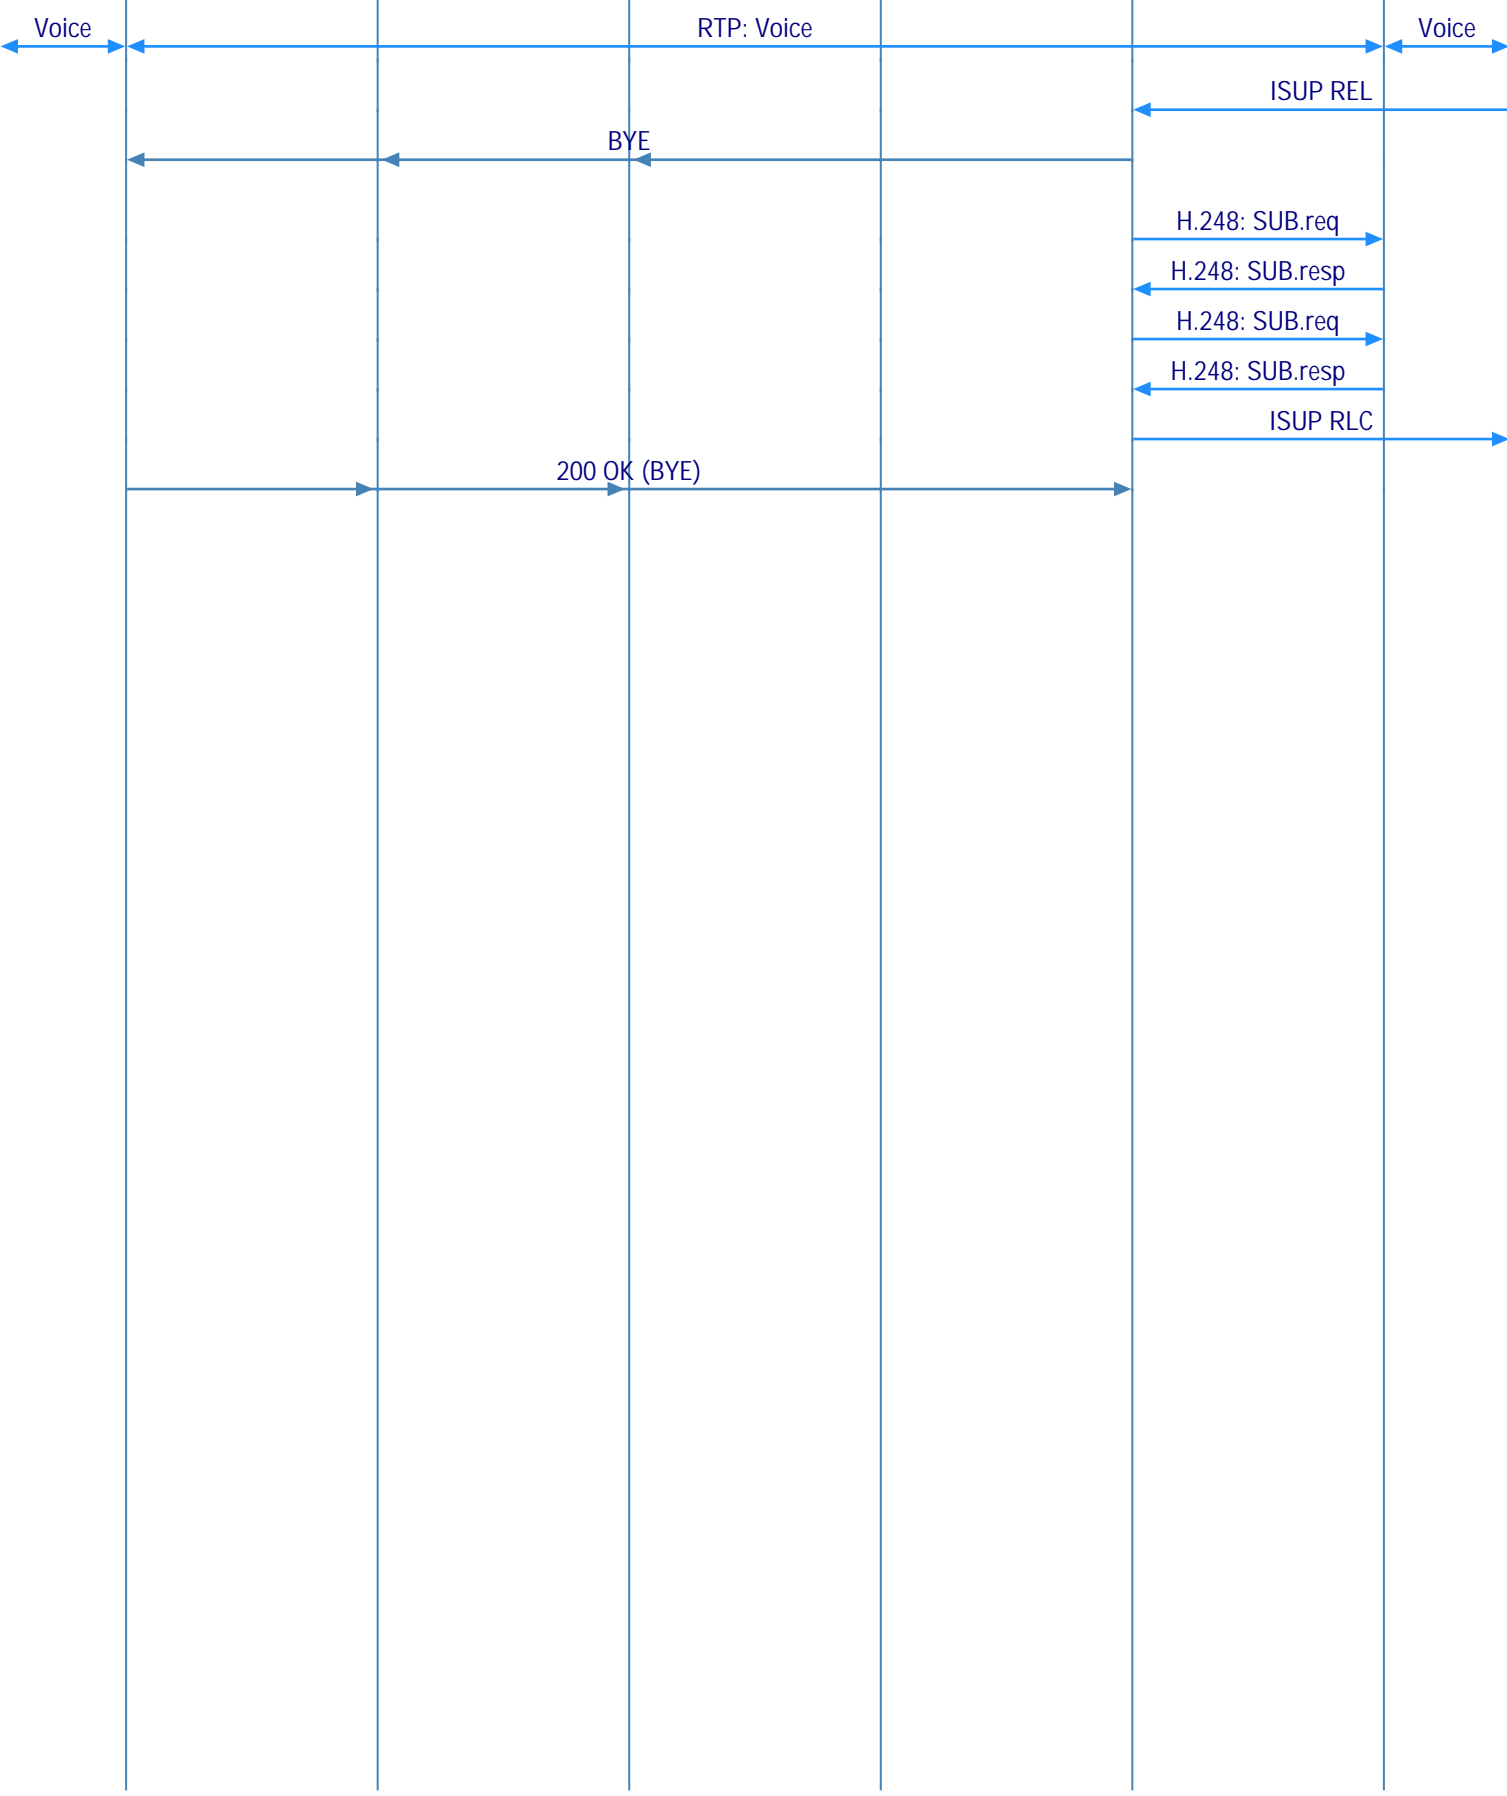

**IMS Originating to PSTN ISUP Call (IMS Network Initiates Call Release)**

Calling UE	IMS Core Network		PSTN Interface		
Caller User Equipment	Visited IMS	Home IMS	Signaling		Media
Caller	Orig P-CSCF	Orig S-CSCF	BGCF	MGC	IM-MGW

IMS to PSTN(ISUP) call setup

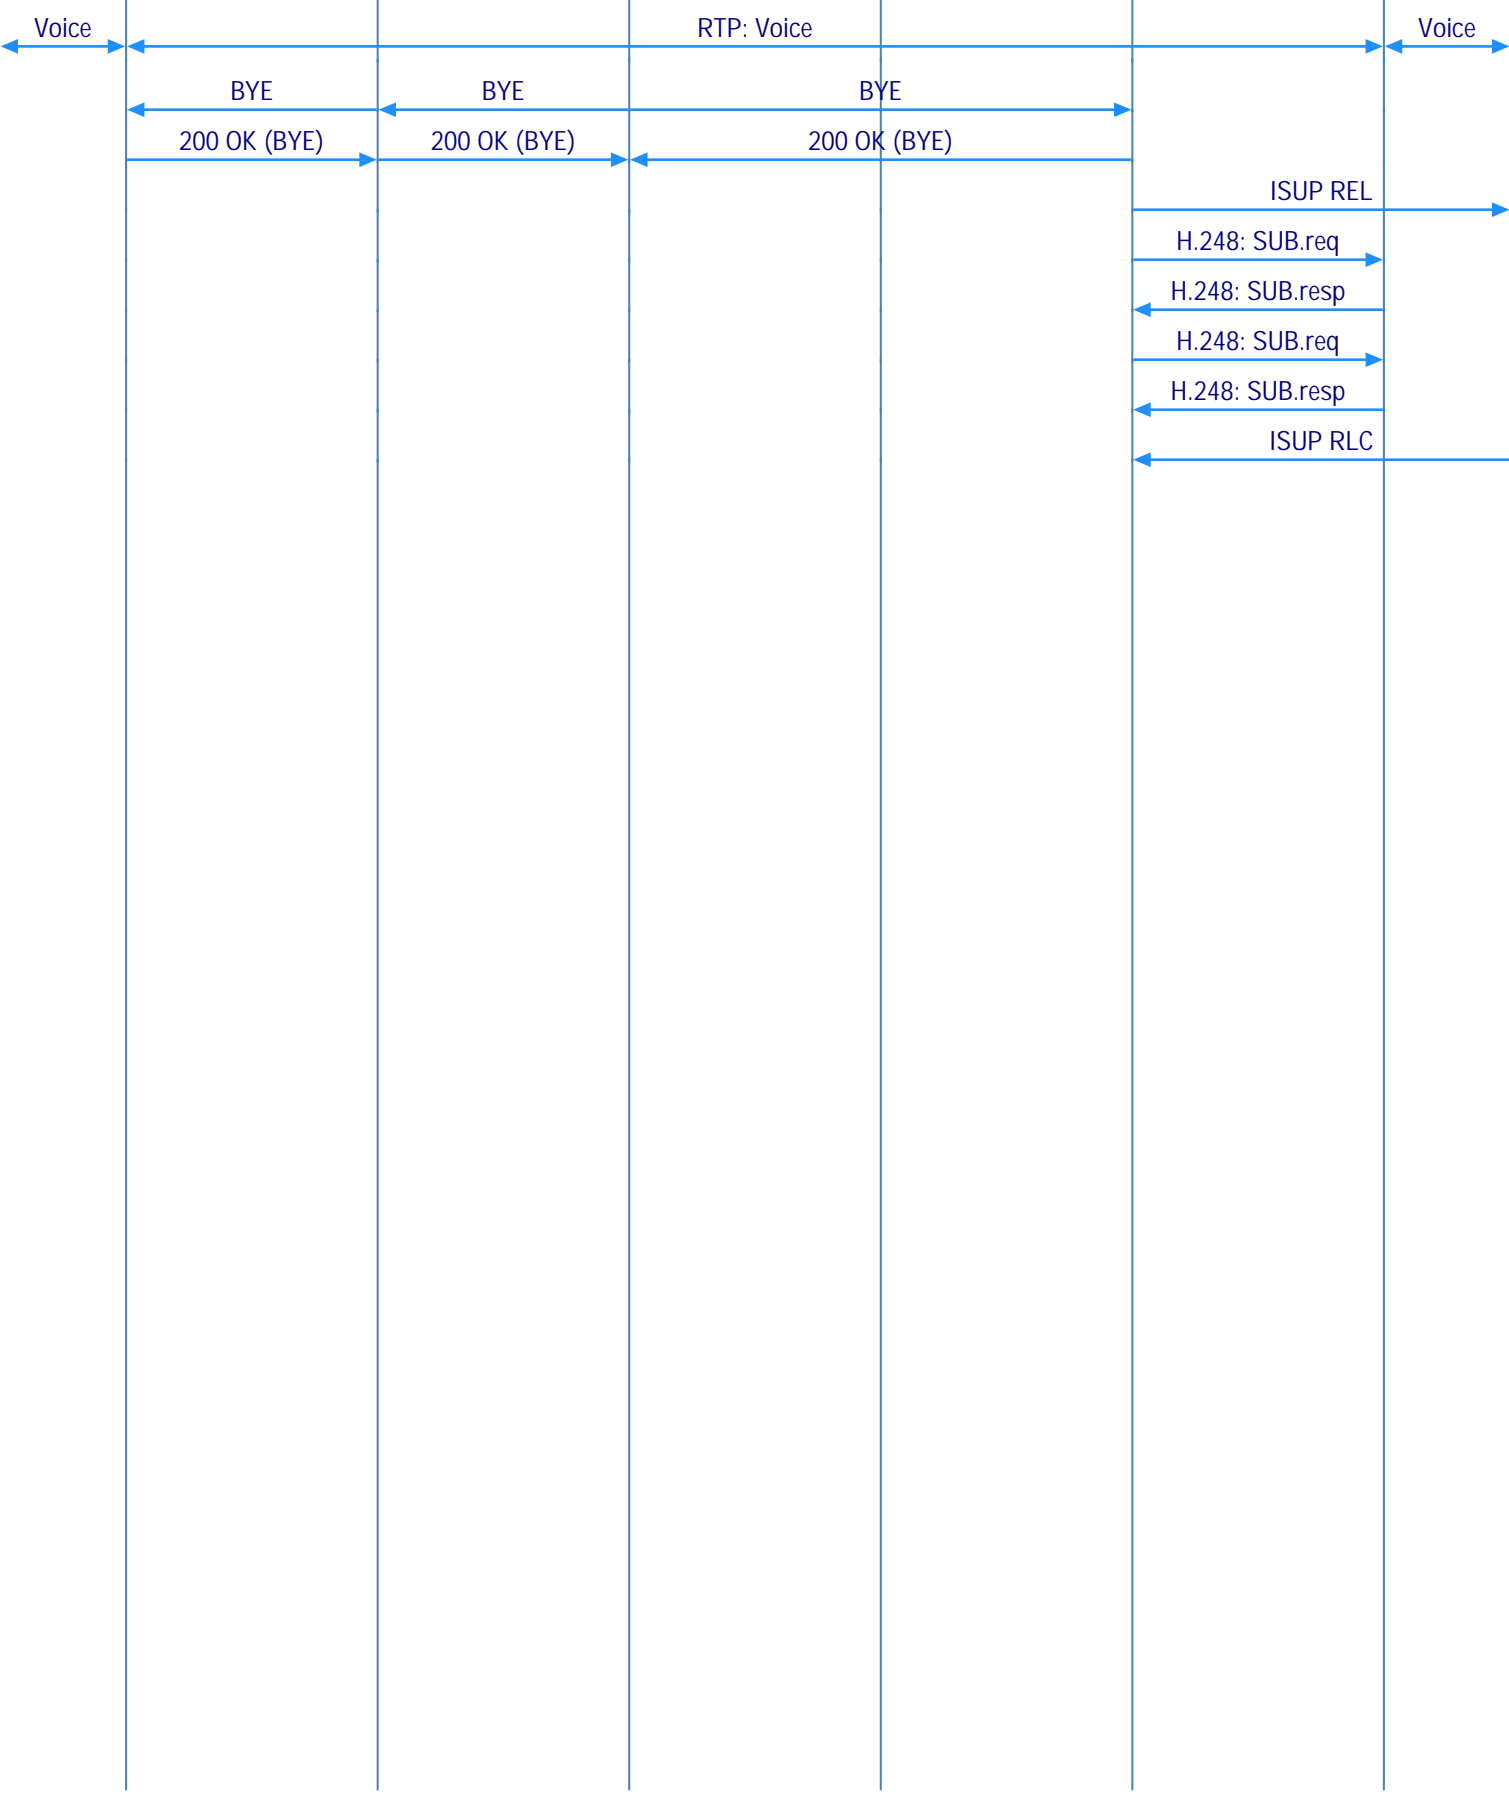

IMS Originating to PSTN ISUP Call (MGCF Initiated Call Release)					
Calling UE	IMS Core Network		PSTN Interface		
Caller User Equipment	Visited IMS	Home IMS	Signaling		Media
Caller	Orig P-CSCF	Orig S-CSCF	BGCF	MGCF	IM-MGW

