



Calling UE

Caller User Equipment

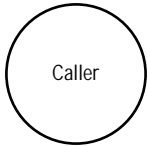


IMS Core Network

Visited IMS


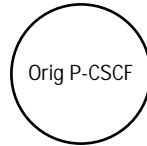


Home IMS


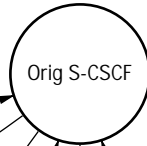


PSTN Interface

Media

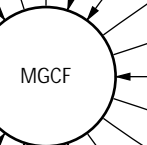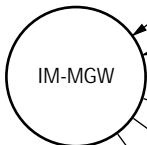


Signaling

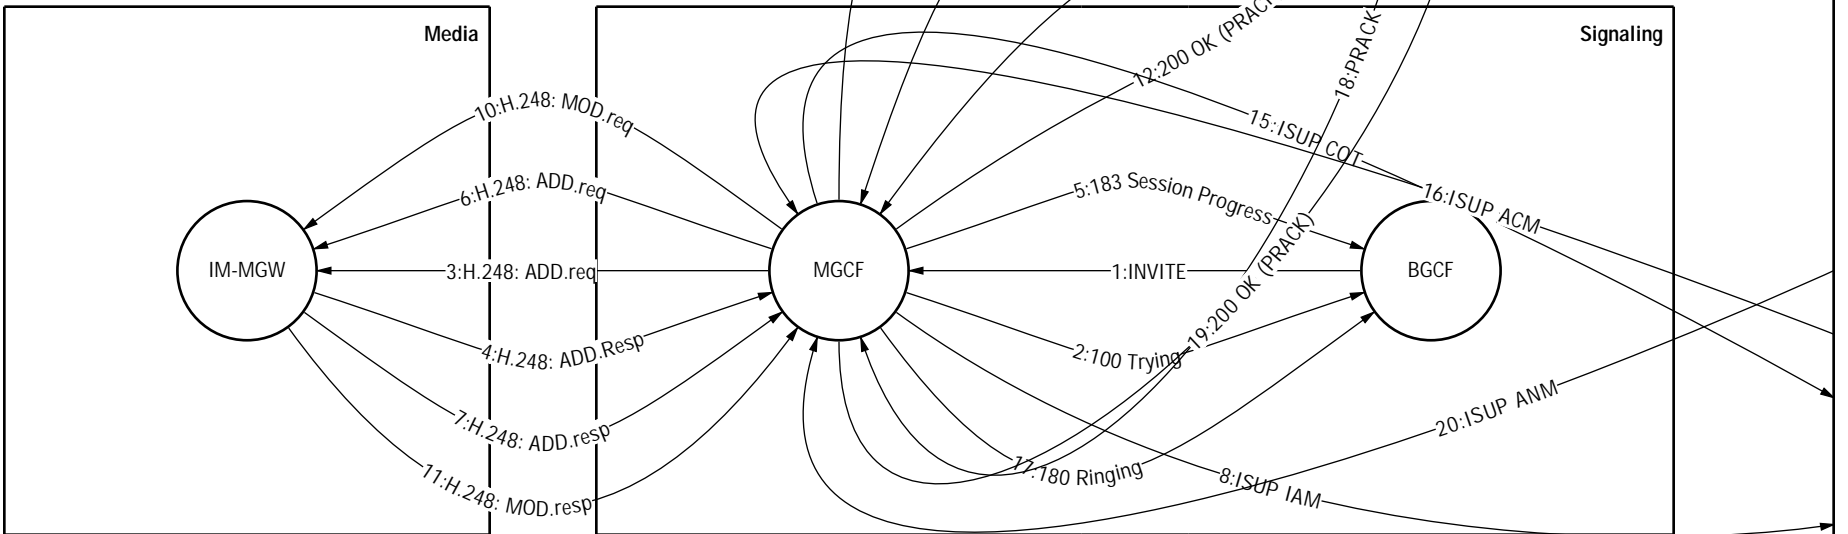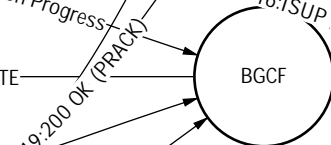


Calling UE

Caller User Equipment

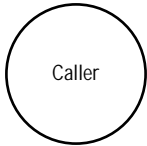


IMS Core Network

Visited IMS

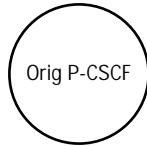

Home IMS

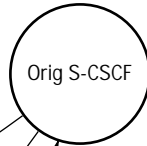

PSTN Interface

